

F10 Review Card

AERIS

WATCH MODE:



To access **Alt Time**, press Upper/Left < 2 sec



To access **CD Time**, from Watch ALT Time, press Upper/Left < 2 sec



While viewing Watch Time:

To change local Time from Main (home) to Alternate Time (travel location) or from Alternate back to Main Time (once home) - >> press Upper/Left momentarily then Upper/Right 2 sec

To access Set Watch Time - >> press Upper/Right and Lower/Left simultaneously 2 sec

To access Altitude/Temperature - >> press/release Lower/Left (< 2 sec)

To access Free Surface Main - >> press Upper/Left 2 sec

To access Log/History - >> press Lower/Left 2 sec



To access **Chrono**, press Upper/Left < 2 sec.



To access **Daily Alarm**, press Upper/Left < 2 sec.



To revert to **Main**, press Upper/Left < 2 sec



COUNTDOWN TIMER

CHRONO (Run Timer)

DAILY ALARM

DIVE MODE:

- Activation of Dive Mode: If Wet Activation is set Off, you must select and be in Free Mode prior to the first dive of a series, the unit will enter Dive Mode from any Free Mode. It won't activate a first dive, while in Watch Mode when Wet Activation is set Off.
- Post Dive: After surfacing, press the Upper/Left 2 sec to revert to the Watch Time screen. To return to Free Surface Main press the Upper/Left 2 sec.

BACKLIGHT OPERATION:


- Press/release Lower/Right < 2 sec to toggle On/Off.
- Will turn Off after the Duration previously set or by press/release of Lower/Right.
- Depress Lower/Right 2 sec while On to keep it On.
- Will be disabled if Lower/Right is depressed 60 sec or Battery is low.
- Will come On (if Off) when Alarms strike. Will turn Off after 10 seconds or by press/release of Lower/Right.

SET MODES:

Refer to the Operating Manual for detailed instructions.

- Watch Mode - can set Time/Date, Alternate Time, CD Timer, Chronograph start/stop, Daily Alarm
- FREE Set Mode - press both Lower/Left and Upper/Right to access Set Groups (A - Alarms, U - Utilities, Serial No.)
- Set A (Alarms) - can set Audible, SRT, EDT, RDI, DD 1, 2, 3
- Set U (Utilities) - can set Wet Activation, Units, Backlight Duration, BDSI
- Change Settings - access Set group, press Lower/Left to step through items, press Upper/Right to increase Set Points or Upper/Left to decrease them, then press Lower/Left to save them

SURFACE MODE

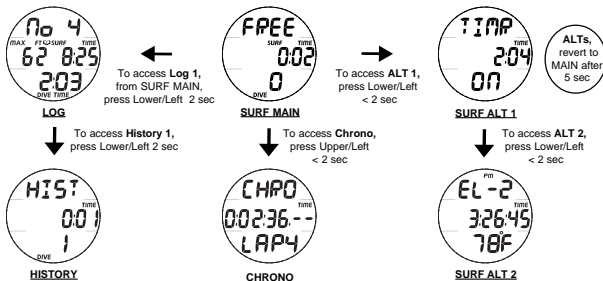

DIVE MODE



Altitude Diving:

- Samples ambient pressure every 15 minutes while in Free Surface Mode prior to Dive #1 and for 24 hours after a dive.
- Automatic adjustment when manually activated from 3,000 to 14,000 feet (915 to 4,270 meters).
- Above 3,000 feet (915 meters), the unit recalibrates to adjust Depth readings every 1,000 feet (305 meters)
- DO NOT use at a different Altitude until the unit automatically adjusts to the new altitude.

Low Battery Condition:

- Replace with a 3 volt, CR2430, Lithium battery.
- If the battery is replaced within 8 seconds, settings are retained.